



## Holosun 509T Quick Reference Card


**Power ON:** Shake sight(\*), or press either brightness button  
**Power OFF:** Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)  
To **switch between Circle+Dot(\*)** and **Dot** press/hold "-" button 3s  
Three modes are available, in this order: Auto ► Manual ► Lockout  
Press/hold "+" 3s to **switch to Manual Mode**.  
Press/hold "+" 3s to **switch to Lockout Mode**.  
Press/hold "+" 3s to **return to Automatic Mode(\*)**.  
**Solar Failsafe™** provides dual power (solar and internal)  
\* default

qrc\_509T\_v6.odg

RJJ 20210705

1 IN

## Holosun 509T Quick Reference Card

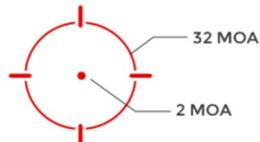

Select from **12 brightness settings** (1 and 2 are NV compatible) using "+" or "-" buttons in manual mode.

Your selected Manual Brightness is: \_\_\_\_ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

**25 yds:** 32MOA=8.4" / 2MOA=0.5" **10 yds:** 32MOA=3.4", 2MOA=0.2"

Torque Optic plate screws to 15 in.lbs. Tighten battery tray screw to 6 in.lbs.

Tighten clamp screw to 20 in.lbs.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: [www.holosun.com](http://www.holosun.com) [warranty@holosun.com](mailto:warranty@holosun.com) (909) 594-2888

1 CM