

HS507c / HS507k Quick Reference Card 1/2

Power on: Press and release either brightness button (“+” or “-”)

Power off: Press and release “+” and “-” simultaneously to turn power and motion sensor off (shake awake is disabled)

Press and hold the “-” button 3 seconds to **switch between Circle+Dot, Dot, and Circle**, in that order.

Press and hold the “+” button for 3 seconds to **activate “lock” mode**. The LED will blink once (the buttons are locked out to prevent setting changes.)

Press and hold “+” again for 3 seconds to **deactivate lock mode**.


507c only: To select **Manual mode:** Press/hold “+” button 4 seconds

507c only: To select **Automatic mode:** Press/hold “+” button 4 seconds

qrc_507ck_v3.odg

RJJ 20210531

HS507c / HS507k Quick Reference Card 2/2

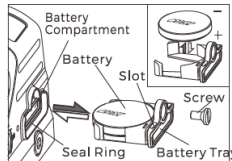

Select from **12 brightness settings** using “+” or “-” buttons.

Your selected manual setting is FULL BRIGHT then _____ clicks down.

Battery is a CR1632. “Low” = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery “+” side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

25 yds: 32MOA=8.4”/ 2MOA=0.5” **10 yds:** 32MOA=3.4”, 2MOA=0.2”

Torque Optic Screws to 15 in-lbs using med. blue threadlocker.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

qrc_507ck_v3.odg

RJJ 20210531