



Holosun 510C Quick Reference Card

Power ON: Shake sight, or press either brightness button
Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** (*) is disabled)

To **switch reticle** from Circle+Dot(*) to Dot to Circle, press "-" 3s
To **switch mode** from Automatic(*) to Manual, press "+" 3s

Solar Fail Safe™ provides dual power (solar and internal)


*default

REVISION 8

1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

Holosun 510C Quick Reference Card

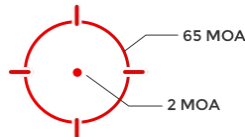

10 daylight and 2 NV brightness settings.

Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR2032. Reticle blinks if the battery is low (2.2 V).

Insert new battery "+" side **DOWN**.

Adjustment screws move center of impact U/D, R/L; 1click = ½ MOA

25 yds: 65 MOA=17" 2 MOA=0.5"

10 yds: 65 MOA=6.8" 2 MOA=0.2"

Push cam clamp lever down & lock to install. (bolt=5-10 in lbs)

Clean with lens cleaner, **NO** alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed.
User is advised to verify any content herein with manufacturers documentation.

1 CM