



## Holosun 407c/407k Quick Reference Card

**Power ON:** Shake sight(\*), or press either brightness button

**Power OFF:** Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

Press/hold the "+" button 3s to **switch to Manual Mode**. LED blinks.

Press/hold the "+" button 3s again to **switch to Lockout Mode**. LED blinks.

**407k only:** Press/hold the "+" button 3s to **return to Manual Mode(\*)**.

**407c only:** Press/hold the "+" button 3s to **return to Automatic Mode(\*)**.

**407c only: Solar Fail Safe™** provides dual power (solar and internal)

\* default

qrc\_407ck\_v6.odg

RJJ 20210630

1 IN

## Holosun 407c/407k Quick Reference Card



Select from **10 daylight and 2 NV settings** using "+" or "-" buttons

Your selected Manual Brightness is: \_\_\_\_ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

**407c only:** 10 yds: 2 MOA=0.2" 25 yds: 2 MOA=0.5"

**407k only:** 10 yds: 6 MOA=0.6" 25 yds: 6 MOA=1.6"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: [www.holosun.com](http://www.holosun.com) [warranty@holosun.com](mailto:warranty@holosun.com) (909) 594-2888

1 CM