



Holosun 407c/507c Quick Reference Card

Power ON: Shake sight(*), or press either brightness button

Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

507c: To **switch between Circle+Dot(*), Dot, and Circle**, press "-" button 3s
Press/hold "+" 3s to **switch to Manual Mode**.

Press/hold "+" 3s to **switch to Lockout Mode**.

Press/hold "+" 3s to **return to Automatic Mode(*)**.

Solar Fail Safe™ provides dual power (solar and internal)

*default

qrc_407507c_v6.odg

RJJ 20210706

1 IN

Holosun 407c/507c Quick Reference Card



Select from **10 daylight** and **2 NV settings** using "+" or "-"

Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

25 yds: 32MOA=8.4"/ 2MOA=0.5" **10 yds:** 32MOA=3.4", 2MOA=0.2"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

1 CM