



Holosun 407c/507c Quick Reference Card

Power ON: Shake sight (*) or press either brightness button

Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

507c only: To **switch between Circle+Dot(*), Dot, and Circle**, press "-" 3s

Three modes are available, in this order: Auto ► Manual ► Lockout. To switch between **Manual**, **Lockout** and **Automatic(*)** modes, press/hold "+" 3s

Solar Fail Safe™ provides dual power (solar and internal)

*default



qrc_407507c_v7.odg

RJJ 20210713

1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

  Holosun 407c/507c Quick Reference Card



In **Manual** mode, select from **10 daylight and 2 NV settings** using "+" or "-"
Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR1632. Reticle blinks if the battery is low (2.2 V).

Insert new battery "+" side **DOWN**.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

25 yds: 32 MOA=8.4" 2 MOA=0.5" **10 yds:** 32 MOA=3.4" 2 MOA=0.2"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, **NO** alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed.
User is advised to verify any content herein with manufacturers documentation.

1 CM