



## Holosun 407k/507k Quick Reference Card

**Power ON:** Shake sight(\*), or press either brightness button  
**Power OFF:** Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

**507k:** To **switch between Circle+Dot(\*), Dot, and Circle**, press "-" button 3s

Press/hold "+" 3s to switch to **Lockout Mode**.  
Press/hold "+" 3s to return to **Manual Mode(\*)**.  
\* default

**REVISION 8**

1 IN

**Instructions:** Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.  
1" and 1 cm grids provided to estimate group sizes.

## Holosun 407k/507k Quick Reference Card



Select from **10 daylight and 2 NV settings** using "+" or "-"  
Your selected Manual Brightness is: \_\_\_\_ clicks down from FULL BRIGHT.  
Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.  
Insert new battery "+" side down.  
Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA  
**407k: 10 yds: 6 MOA=0.6" 25 yds: 6 MOA=1.6"**  
**507k: 10 yds: 32MOA=3.4", 2MOA=0.2" 25 yds: 32MOA=8.4"/ 2MOA=0.5"**  
Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.  
Clean with lens cleaner, not alcohol or acetone

Holosun CS: [www.holosun.com](http://www.holosun.com) [warranty@holosun.com](mailto:warranty@holosun.com) (909) 594-2888

**DISCLAIMER:** Information adapted from OEM sources, but is not verified nor endorsed. 1 CM  
User is advised to verify any content herein with manufacturers documentation.