



Holosun 407c/507c Quick Reference Card

Power ON: Shake sight or press either brightness button

Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** (*) is disabled)

507c only: To **switch between Circle+Dot(*), Dot, and Circle**, press "-" 3s

Three modes are available: Automatic(*) ► Manual ► Lockout.

To switch modes, press/hold "+" 3s

Solar Fail Safe™ provides dual power (solar and internal)


*default

REVISION 8


1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

 Holosun 407c/507c Quick Reference Card



2 MOA

 

32 MOA

2 MOA

10 daylight and 2 NV brightness settings.

Your selected Manual Brightness is: _____ clicks down from FULL BRIGHT.

Battery is a CR1632. Reticle blinks if the battery is low (2.2 V).

Insert new battery "+" side **DOWN**.

Adjustment screws move center of impact U/D, R/L, 1click = 1MOA

25 yds: 32 MOA=8.4" 2 MOA=0.5" **10 yds:** 32 MOA=3.4" 2 MOA=0.2"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, **NO** alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed.
User is advised to verify any content herein with manufacturers documentation.

1 CM