



Holosun 407c/407k Quick Reference Card

Power ON: Shake sight(*), or press either brightness button
Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

407c only: Press/hold "+" 3s to **switch to Manual Mode.**

407c only: Press/hold "+" 3s to **switch to Lockout Mode.**

407c only: Press/hold "+" 3s to **return to Automatic Mode(*)**.

407c only: **Solar Fail Safe™** provides dual power (solar and internal)

407k only: **Press/hold "+" 3s to switch to Lockout Mode.**

407k only: **Press/hold "+" 3s to return to Manual Mode(*)**.

* default

REVISION 8

1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

Holosun 407c/407k Quick Reference Card



Select from **10 daylight and 2 NV settings** using "+" or "-"

Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

407c only: 10 yds: 2 MOA=0.2" 25 yds: 2 MOA=0.5"

407k only: 10 yds: 6 MOA=0.6" 25 yds: 6 MOA=1.6"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed. 1 CM
User is advised to verify any content herein with manufacturers documentation.