



Holosun 507c/507k Quick Reference Card

Power ON: Shake sight(*), or press either brightness button
Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)

507c only: Press/hold "+" 3s to **switch to Manual Mode**.

507c only: Press/hold "+" 3s to **switch to Lockout Mode**.

507c only: Press/hold "+" 3s to **return to Automatic Mode(*)**.

507c only: **Solar Fail Safe™** provides dual power (solar and internal)

507k only: **Press/hold "+" 3s to switch to Lockout Mode**.

507k only: **Press/hold "+" 3s to return to Manual Mode(*)**.


* default

REVISION 8

1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

Holosun 507c/507k Quick Reference Card

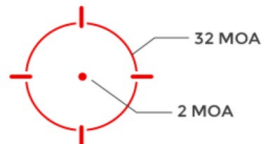

Select from **10 daylight** and **2 NV settings** using "+" or "-"

Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

25 yds: 32MOA=8.4"/ 2MOA=0.5" **10 yds:** 32MOA=3.4", 2MOA=0.2"

Torque Optic Screws to 15 in-lbs using medium/blue threadlocker.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed.
User is advised to verify any content herein with manufacturers documentation. 1 CM