



Holosun 509T Quick Reference Card


Power ON: Shake sight(*), or press either brightness button
Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (**Shake Awake™** is disabled)
To **switch between Circle+Dot(*)** and **Dot** press/hold "-" button 3s
Three modes are available, in this order: Auto ► Manual ► Lockout
Press/hold "+" 3s to **switch to Manual Mode**.
Press/hold "+" 3s to **switch to Lockout Mode**.
Press/hold "+" 3s to **return to Automatic Mode(*)**.
Solar Failsafe™ provides dual power (solar and internal)
* default

REVISION 8

1 IN

Instructions: Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.
1" and 1 cm grids provided to estimate group sizes.

Holosun 509T Quick Reference Card

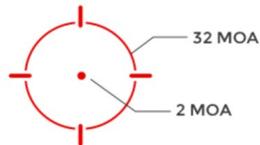

Select from **12 brightness settings** (1 and 2 are NV compatible) using "+" or "-" buttons in manual mode.

Your selected Manual Brightness is: ____ clicks down from FULL BRIGHT.

Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low.

Insert new battery "+" side down.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

25 yds: 32MOA=8.4" / 2MOA=0.5" **10 yds:** 32MOA=3.4", 2MOA=0.2"

Torque Optic plate screws to 15 in.lbs. Tighten battery tray screw to 6 in.lbs.

Tighten clamp screw to 20 in.lbs.

Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

DISCLAIMER: Information adapted from OEM sources, but is not verified nor endorsed. 1 CM
User is advised to verify any content herein with manufacturers documentation.