

## **Holosun 509T Quick Reference Card**

Power ON: Shake sight(\*), or press either brightness button Power OFF: Press/release "+" and "-" simultaneously to turn power and motion sensor off (Shake Awake™ is disabled)

To switch between Circle+Dot(\*) and Dot press/hold "-" button 3s Press/hold the "+" button 3s to activate "lock" mode. LED blinks once (buttons locked out to prevent setting changes.)

Press/hold "+" again for 3s to deactivate lock mode(\*).

Solar Failsafe™ provides dual power (solar and internal)

Press/hold "+" button 4s to select Automatic(\*) Brightness Mode

Press/hold "+" button 4s to select Manual Brightness Mode

\* default

## **Holosun 509T Quick Reference Card**



Select from 12 brightness settings using "+" or "-" buttons in manual mode. Your selected Manual Brightness is: \_\_\_\_ clicks down from FULL BRIGHT. Battery is a CR1632. "Low" = 2.2 Vdc. Reticle blinks if the battery is low. Insert new battery "+" side down.

Turn Adjustment screws in the direction to move impacts, 1click=1MOA 25 yds: 32MOA=8.4"/ 2MOA=0.5" 10 yds: 32MOA=3.4", 2MOA=0.2"

Torque Optic Screws to 15 in-lbs using med. blue threadlocker. Clean with lens cleaner, not alcohol or acetone

Holosun CS: www.holosun.com warranty@holosun.com (909) 594-2888

grc 509T v5.odg

RJJ 20210605