



## Vortex Venom® Quick Reference Card

**Power on:** Press either arrow button to turn on.

**Power off:** Press and hold the down arrow 5 seconds.

Venom has two brightness modes, Auto and Manual. Auto will increase or decrease in brightness depending on the ambient lighting conditions.

In auto mode, unit powers down after 14 hours to save battery life.

Manual mode is controlled by up/down buttons and will not power down automatically.


To engage Auto mode, press and hold up arrow until the dot flashes three times. To engage Manual mode, press and hold up arrow until dot flashes two times

REVISION 8

1 IN

**Instructions:** Print actual size, cut out, fold 1X to produce a 3"x5" card for pocket or range bag.  
1" and 1 cm grids provided to estimate group sizes.

## Vortex Venom® Quick Reference Card

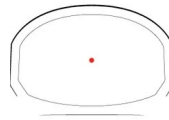

Choose between **10 levels of brightness** in manual mode or switch to auto mode.

To install or replace the CR1632 battery, remove the battery cover by rotating it counter-clockwise. Place the battery in the circular slot with numbers facing outward, positive side up. Replace the battery cover and tighten until snug. Do not over tighten.

Turn **Adjustment screws** in the direction to move impacts, 1click=1MOA

**10 yds:** 3 MOA = 0.3" **25 yds:** 3 MOA = 0.8"

Torque Optic Screws until seated, then secure.

Clean with fresh water and clean cloth, not alcohol, TCE or acetone

Footprint: Weaver/Picatinny

Vortex Customer Service: [service@vortexoptics.com](mailto:service@vortexoptics.com) 800-426-0048

**DISCLAIMER:** Information adapted from OEM sources, but is not verified nor endorsed.  
User is advised to verify any content herein with manufacturers documentation.

1 CM